

## Programming Security Codes

### Programming codes from an LED Keypad:

#### The Master Code

To program the Master Code, enter [\*][5][current Master Code][40][new Master Code]. The Master Code must be four digits unless otherwise indicated by your installer. Enter digits 0 through 9 only. Press [#] to return to the Ready state.

Be sure to record your new Master Code on the "System Information" page in this booklet. **NOTE: We recommend that the factory default Master Code [1234] not be used.**

#### Additional Codes

Up to 36 additional codes may be programmed. Codes 01-32 are regular access codes. Codes 33 and 34 are duress codes. Codes 41 and 42 are the partition 1 and partition 2 master codes, respectively.

#### To program a new code:

Enter [\*][5][Master code][code number][new access code]. The code number is a double-digit number from 01-34 or 41-42.

Access codes must be four digits long. Enter digits 0 through 9 only.

To exit code programming, press [#].

If an access code already exists for the code number you have selected, it will be replaced by the new code. Be sure to record your new code(s) on the "System Information" page in this book.

#### To erase a code:

Enter [\*][5][Master code][code number][\*]. To exit code programming, press [#]. **The master code cannot be erased.**

### Programming codes from an LCD Keypad:

#### Master Code

Press the [\*] key to enter the function list. Scroll (< >) to...

Press (< >) for<> Access Codes	Press [5] or [*]. The display will read...
-----------------------------------	--

Enter Master Access Code	Enter your current Master Code. The display will read...
-----------------------------	--

<(< >) to Edit <> User Code 01P	"01P" represents the first access code. Use the arrow (< >) keys to scroll to "40P" and press the [*] key to indicate that you wish to program the Master Code. The display will read...
------------------------------------	--

Enter New Code 1234 < >	Enter the new Master Code. The Master Code must be four digits unless otherwise indicated by your installer. Enter digits 0 through 9 only. Once the new code is entered, the keypad will beep 3 times and the display will read...
----------------------------	---

<(< >) to Edit <> User Code 01P	Press [#] to exit the code programming function.
------------------------------------	--

Be sure to record your new Master Code on the "System Information" page in this booklet. **NOTE: We recommend that the factory default Master Code [1234] not be used.**

#### Additional Access Codes

To erase, add or change a user code, press [\*] to enter the functions list. Use the arrow (< >) keys to scroll to the following message...

Press (< >) for<> Access Codes	Press [*]. Display will read...
-----------------------------------	---------------------------------

Enter Master Access Code	Enter the Master Code. Display will read...
-----------------------------	---

[+] to Edit <> User Code 01P	Use the scroll keys (< >) to find the access code – indicated by "01P" to "34P" or "41P" to "42P" – you wish to add, change or delete. Press the [*] key to select the code you wish to alter. The display will read...
---------------------------------	---

Enter New Code 1234 < >	To add or change a code, enter the new code. Access codes must be four digits unless otherwise indicated by your installer. Enter digits 0 through 9 only. To delete an access code, enter [*]. Once the 4 digit code or [*] has been entered, the keypad sounder will beep 3 times and the display will read...
----------------------------	--

[+] to Edit <> User Code 01P	The "P" means the code has been programmed. If there is no "P" then that code is deleted. Press [#] to exit the code programming function. <b>The Master Code cannot be erased.</b>
---------------------------------	---

Remember to record your new code(s) on the "System Information" page in this booklet.

### Access Code Attributes

Additional programmable attributes, such as zone bypassing capability, can be activated or deactivated for each access code. For more information regarding access code attributes, please contact your installer.

#### Partition Master Codes

If your system is partitioned, you can have a master code for each partition. Partition 1 master code is access code 41, partition 2 master code is access code 42.